

NOTES:-


- FTL OF TOILETS & BALCONIES SHOULD BE 25MM LOWER THAN THE FTL OF RESPECTIVE FLOORS.
- CONMIX MOYA PROOF WS2/CONMIX MOYA PROOF HF WATER PROOFING TO BE PROVIDED IN TOILETS, BALCONIES & ROOF TERRACE PRIOR TO TILING

FINISHES-

- FLOORS - 600MM X 600MM HOMOGENOUS FLOOR TILES WITH CONMIX TILE ADHESIVE C800.
- TOILET FLOORS-- 300MM X 300MM NON SKID CERAMIC FLOOR TILES WITH CONMIX TILE ADHESIVE C500.
- TOILET WALLS - 300MM X 300MM CERAMIC WALL TILES UP TO CEILING HEIGHT WITH CONMIX TILE ADHESIVE C500. USE CONMIX TILE JOINT FILLER GROUT OF APPROPRIATE COLOR FOR GROUTING JOINTS BETWEEN TILES
- APPLY CONMIX MOYA SHIELD RBE BETWEEN ALL EXTEND WALL AND SLAB JOINT FOR WATER PROOFING
- ADD CONMIX MEGA FLOW MP TO ALL INTERNAL/ EXTERNAL PLASTER, WET AREA PLASTER

NOTE THE INTERVAL STAGE OF CONSTRUCTION BEFORE PHASE 02

- ALL DUCTS SHOULD BE COVERED BY 50MM THICK R.C SLAB IN 1M HEIGHT
- 12MM GROOVE, SEALANT AND WATERPROOFING TO BE APPLIED ON SCRED

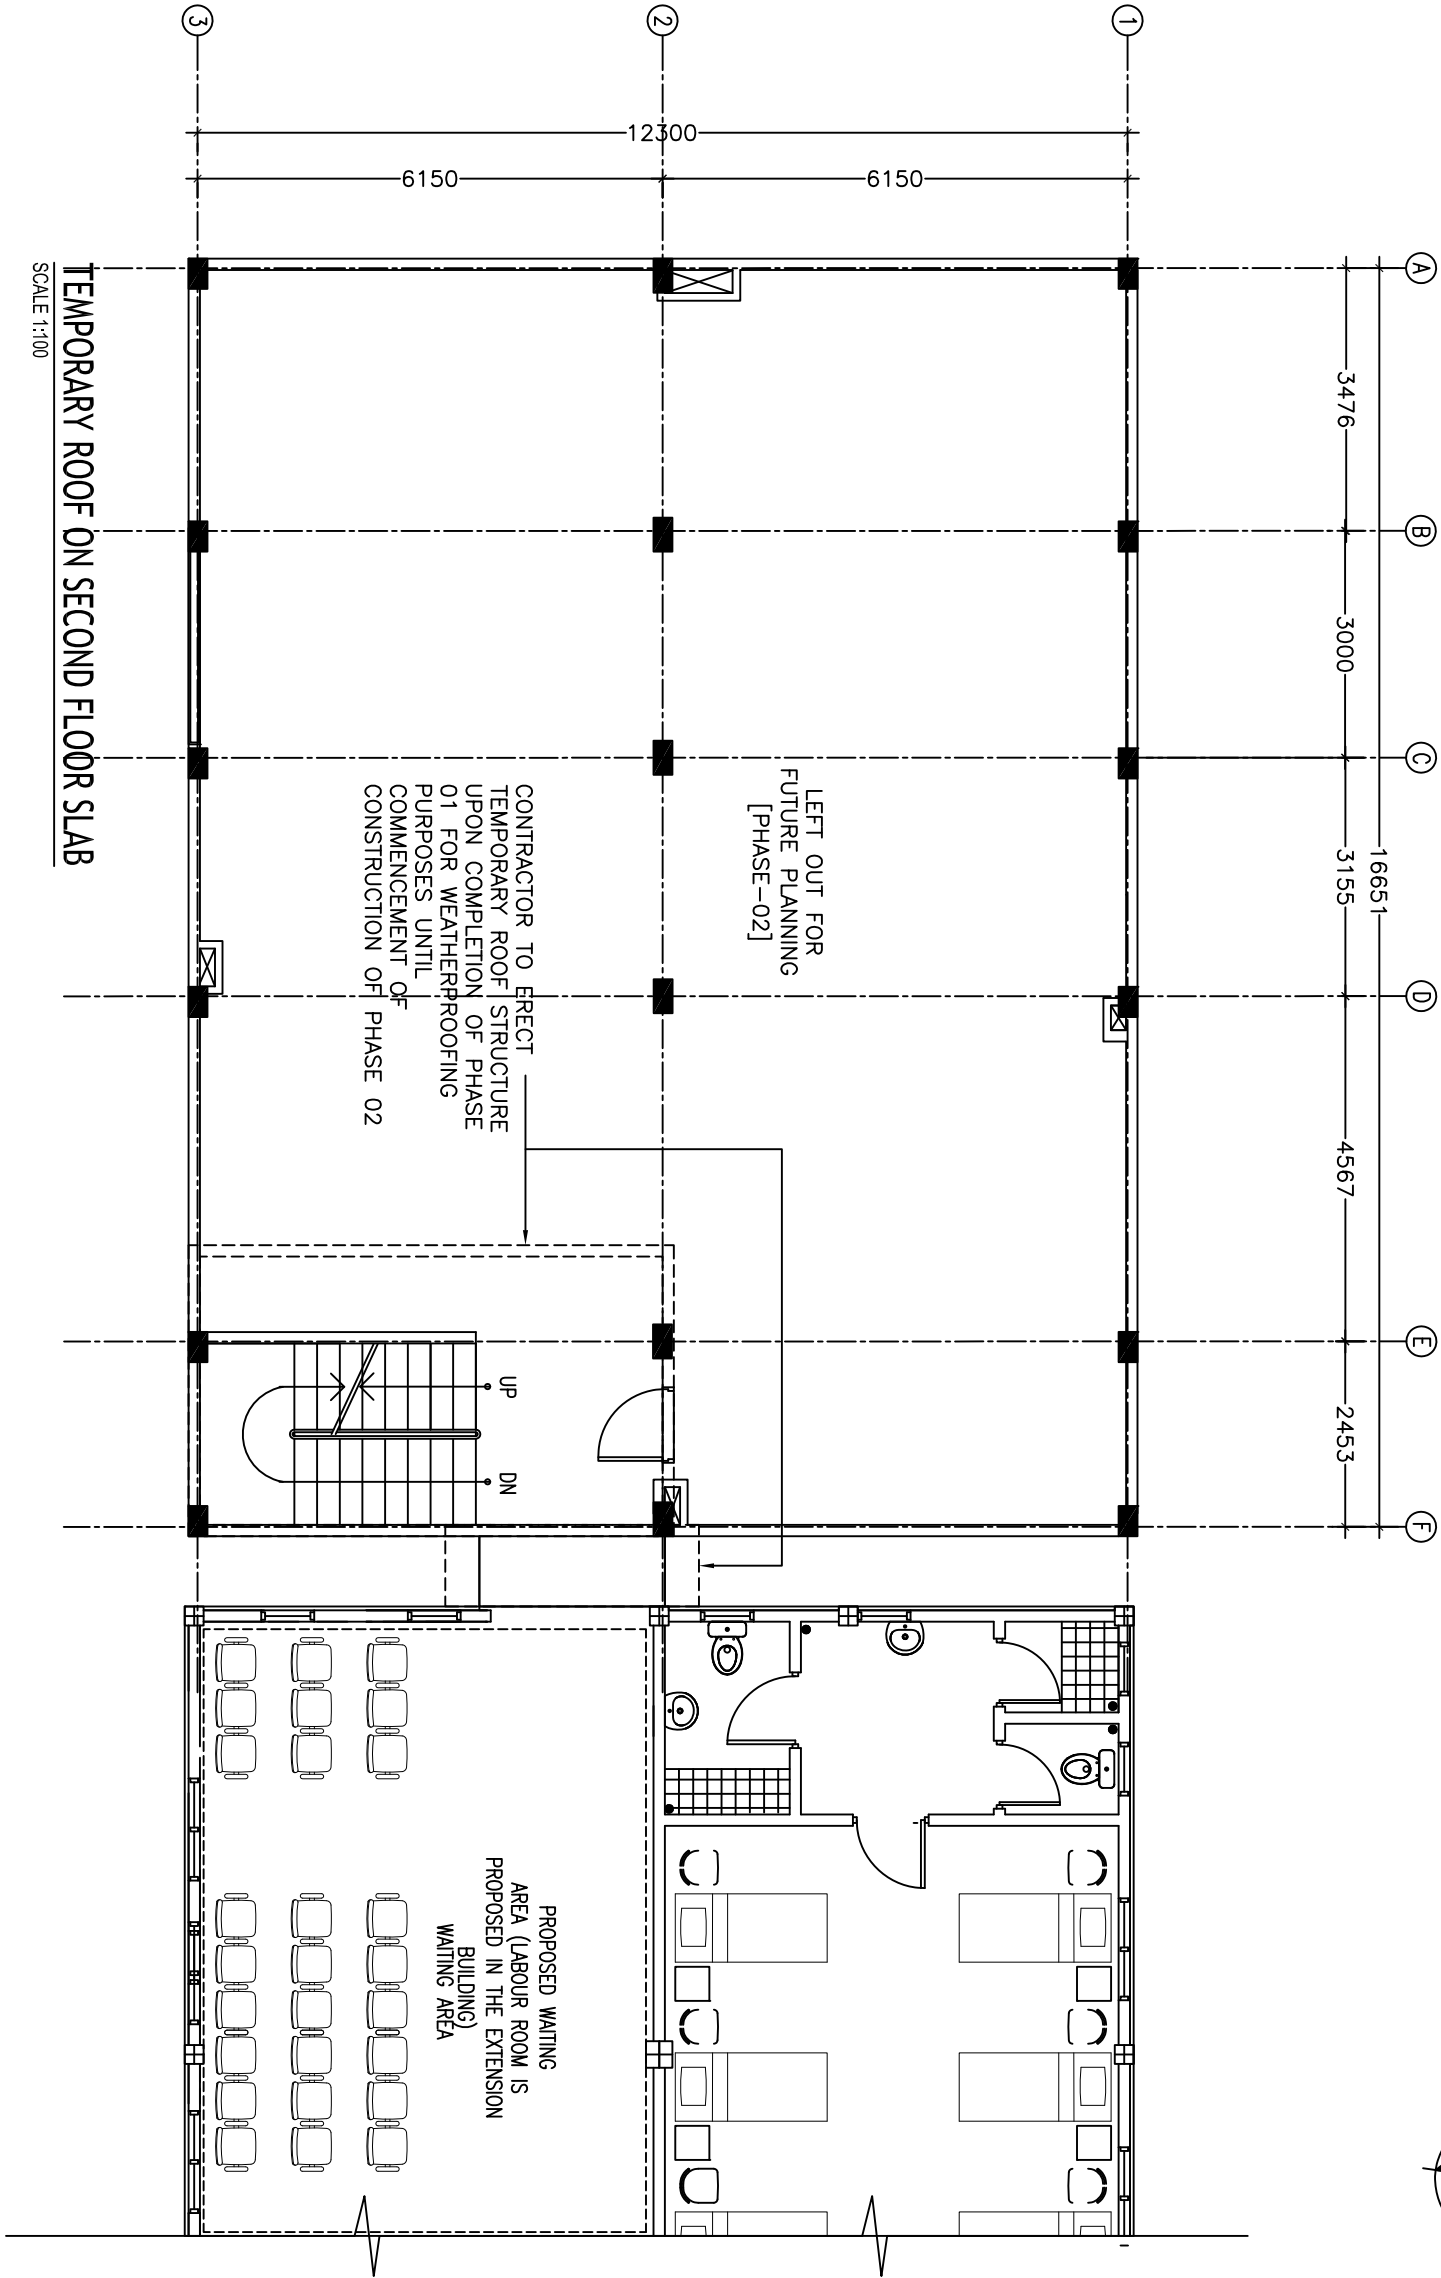

KEY /LEGEND NOTES	
PD	PLUMBING DUCT
FD	FLOOR DRAIN
ED	ELECTRICAL DUCT
	BLOCK MASONRY WALL
	BLOCK MASONRY WALL 2000MM HIGH
	150MM THK RC WALL 1000MM HIGH